

QUICK PROGRAM GUIDE

Color/Modes for Savi™ Pool and Spa, Melody, X-Stream Melody, M4-SA Light Systems (Note), and Galaxy PLUS

- | | |
|---------------------------|---------------------------|
| 1. Treasure Island | smooth color transition |
| 2. Moonlight White | white |
| 3. SAVI Blue | dark blue |
| 4. Sargassion Sea | green |
| 5. Blue Lagoon | light blue |
| 6. Passion Pink | pink |
| 7. Carribean Hues | blue to green fade |
| 8. Copacabana | medium fast color changes |
| 9. Dance Party | fast color changes |

www.nexuslighting.com/pool

QUICK PROGRAM GUIDE

Operating Instructions for Savi™ Pool and Spa, Melody, X-Stream Melody, M4-SA Light Systems (Note), and Galaxy PLUS

To change the color mode of the light(s), turn the light(s) ON and wait for stored mode to display after initial white display (about 30 seconds).

See the following chart to ADVANCE your pool and or spa area lighting system to the desired color mode using your light switch.

Combinations including Savi™ Pool Light	
Time held at OFF position	Result
1-2 seconds	ADVANCE all lights one color mode.
3-5 seconds	ADVANCE Savi™ Spa Light, M4-SA, and/ or Melody, FREEZE Savi™ Pool Light
6-9 seconds	RESET light(s) to first color mode (<i>Treasure Island</i>)
10 + seconds	"Memory Feature" (<i>remembers last color used</i>)

Combinations without Savi™ Pool Light	
Time held at OFF position	Result
1-2 seconds	ADVANCE light(s) one color mode.
6-9 seconds	RESET light(s) to first color mode (<i>Treasure Island</i>)
10 + seconds	"Memory Feature" (<i>remembers last color used</i>)

Savi™ Pool Light Installations Only	
Time held at OFF position	Result
1-2 seconds	ADVANCE all lights one color mode.
3-5 seconds	NO CHANGE (This is a design feature for pools using Savi™ Spa Lights, Melody, & M4-SA controlled lights.)
6-9 seconds	RESET light(s) to first color mode (<i>Treasure Island</i>)
10 + seconds	"Memory Feature" (<i>remembers last color used</i>)